



INSTRUCTION MANUAL

Assembling and using the Snoozy One baby stroller



THE SMART STROLLER COMPANY

Parts



Maintenance

- Please check if the baby stroller's parts are loose, missing, broken or have any other damage. Please arrange to replace or repair if necessary.
- The baby stroller should be kept away from fire or other very hot objects.
- Use neutral or soapy water to clean the textile, metal, leather and plastic surfaces.
 Wipe the baby stroller gently. Do not use strong liquid chemicals. Leave it to air dry.
 Never use the washing machine to clean it.

Warning

- Please read the following instructions carefully and keep it with you for reference.
- Not following the instructions could compromise the baby's safety.
- The baby stroller must be watched by the person in charge at all times.
- The sport seat is not suitable for babies under 6 months old.
- The product is not suitable for infants of over 17 kg (33 lbs).
- The bassinet is only suitable for babies aged 0 6 months. Max. carrying capacity is 9 kg (20 lbs).
- Please make sure that the brake is released before using the baby stroller.
- Please don't fold the baby stroller while the baby is sitting in the stroller.
- Make sure that the baby is wearing the safety belt when sitting in the sport seat.
- Don't leave the stroller unattended on a slope.
- The max. carrying capacity for the sport seat is 17 kg (33 lbs).
- Please don't put shopping bags or other heavy items on the baby stroller's handle to prevent the stroller falling over.
- Please don't disassemble or adjust any of the stroller's parts while the baby is in the baby stroller.
- Please keep plastic bags away from the baby stroller to prevent the baby from suffocating.
- Please don't use a more than 20 mm thick cotton blanket for the bassinet.
- The max. carrying capacity for the two hooks on the handle is 1 kg (2.2 lbs).
- The max. carrying capacity of the seat pocket on the chair's back is 1.5 kg (3.3 lbs).

This product meets the EU EN1888-2012 and ASTM F833-15 (American Society for Testing and Materials) standards for baby strollers. All textiles are Oeko-Tex 100 $^{\circ}$ certified.












First steps

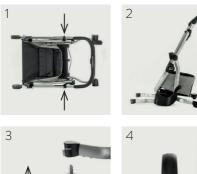







Opening and assembling the Snoozy One

1 Open Hold the frame on the outside and release the locking mechanism on both sides (1). Pull the handle. The stroller is open when you hear a clicking sound (2).
2 Wheels Front wheel: Put the small wheel on the axle. The wheel is attached when you hear a clicking sound (3). Back wheel: Put the big wheel on the axle. The wheel is attached when you hear a clicking sound (4).

3 Seat Push the connecting tube into the attachment (5). When this is done correctly, you should not be able to remove the seat when you lift it up. A clicking sound ensures that both sides are fully engaged and secure.

4 Canopy Attach the canopy by pressing the canopy clip into the seat frame's attachment pins (6). Repeat on the other side and close the zipper (7).

 


5 Front bar Attach the front bar (handle) to the seat (8). Make sure the front bar is fully attached.

Assembling the bassinet

1 Assembly Connect the bassinet's connecting tube into the frame's attachment (9). Make sure the bassinet is fully attached.

2 Remove If you need to remove the bassinet, push the connecting buttons on both sides and lift up the bassinet (10).



4 Foot cover Zip the foot cover onto the top of the bassinet (13).

5 Bassinet's canopy Attach the canopy by pressing the clip onto bassinet frame until you hear a clicking sound (14). Repeat the action on the other side. Once assembled,, close the zipper between the canopy and bassinet (15).

6 Front bar Attach the front bar (handle) to the bassinet (16). Make sure the front bar is fully attached.














Function and use

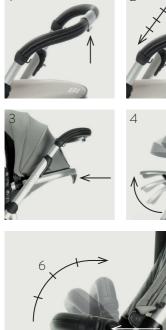


Adjustments

1 Handle bar Push the button, pull out the handle bar, then release the button (1). This baby stroller has three different levels to adjust to your required height (2).

2 Baby sport seat Push the lever on top of the sport seat (in the middle) (3). Adjust the seat to one of the three positions (4).

3 Front bar (handle) Grab the front bar (handle) and press the buttons on the side using your forefingers (5). Push the front bar (handle) up or down (6). There are three positions.

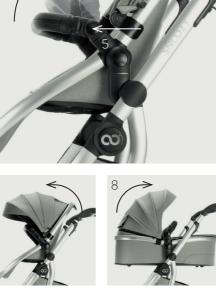

4 Canopy It is possible to attach the canopy to the sport seat (7) or the bassinet (8). Just close the zipper and pull the canopy to the required position.

Wheels

Fix the front wheel Pull down the lever (9) and turn the front wheel around (10) until you hear a clicking sound.



Brake

Using the brake Use your right foot to step on the brake (11) and pull the baby stroller slightly towards you (12). Both rear wheels are now locked. To release the brake, step on the lever again and push the stroller forward.

Warning: Activate the brake at all times as soon as the stroller is at rest.

 
Safety belt

1 Using the safety belt Press the button to release the safety belt (13). Sit the baby in the sport seat. Pull the two safety straps over the baby into the middle and insert the buckles into the buckle until you hear a clicking sound (14).

2 Adjusting the belt lengths Push or pull the buckle up or down until you reach the required length (15).

Warning: Fasten the belts at all times whenever the baby is in the stroller.










Disassembly and folding up









 

Disassembly

1 Canopy Open the zipper between the canopy and seat or bassinet (1).Disconnect the attachment clips and remove the canopy from the sport seat or bassinet (2).

2 Front bar (handle) Hold the front bar (handle). Use your forefinger to press the semicircular connecting button (3). The front bar (handle) can be removed (4). Repeat on the other side.

3 Sport seat /Bassinet Hold the sport seat/ bassinet, with both hands and use your forefinger to press the connecting button (5) on both sides, pull up and remove the sport seat/ bassinet (6).

4 Wheels Front wheel: Press the connecting button for the front wheel (7) and pull down the wheel (8).

Back wheel: Press the connecting button for the back wheel (9) and pull away the wheel (10).

Folding up the bassinet

Remove the canopy and the front bar (handle). Open the zipper on both sides of the bassinet (11).

To fold the bassinet up grab the plastic part of the bassinet and pull up the lock (12). Push the plastic part of the bassinet inside

(13). You can now fold the bassinet up.





Folding up the baby stroller

1 Lock the rear wheels by stepping on the brake with your right foot (14).

2 Hold the handle bar on the left and right side and push in the small buttons using your forefingers. At the same time pull up the switch lever on both sides (15). Now the baby stroller can be folded up (16).





3 After folding up the baby stroller, lock the locking mechanism on both sides (17).



Measurements and weights

	length/cm	height/cm	width/cm	weight/kg
Complete stroller with sport seat - open (with canopy, handle bar)	88.0	98.5-108.0	59.5	13.800
Complete stroller with sport seat - folded (with canopy, handle bar)	98.0	53.5	59.5	13.800
Sport seat	83.0	18.0	44.0	2.650
Complete stroller with bassinet -open (with mattress, cover, canopy, handle bar)	88.0	98.5-108.0	59.5	14.220
Bassinet -open (incl. mattress and cover)	84.0	22.5	44.0	3.070
Bassinet -folded (incl. mattress and cover)	84.0	5.0	44.0	3.070
Bassinet inside	74.0	21.5	33.5	3.070
Bassinet cover	45.0	38.0	2.0	0.245
Bassinet mattress	74.0	3.0	33.5	0.465
Bassinet without cover and mattress	84.0	22.5	44.0	2.360
Frame open with 4 wheels (without sport seat/bassinet)	88.0	98.5	59.5	10.270
Frame folded with 4 wheels (without sport seat/bassinet)	83.0	43.0	59.5	10.270
Frame folded without wheels (without sport seat/bassinet)	80.0	24.0	50.0	7.200
Transport basket (in frame) 26 liter volume/carry capacity: 10.0 kg	33.0	22.0	36.0	0.380
Handle bar	40.0	5.0	5.0	0.400
Canopy (sun/wind protection)	40.0	41.0	33.0	0.480
Front wheel (1 pc.)	Ø 19.0		4.3	0.625
Rear wheel (1 pc.)	Ø 25.0		5.5	0.910

Thank you for choosing the Snoozy One. This baby stroller was carefully designed with love in Switzerland. We hope you enjoy the ride. Snooze on, little one.

SNOOZY A brand of Movetime GmbH Hoffnungsweg 3 • CH-8820 Wädenswil Tel. +41 (0) 44 586 86 18 • info@movetime.ch snoozy-strollers.com

facebook/instagram: snoozystrollers

